


## AS2350 Presentation Imager Quick Guide

### Note


- ☞ A standard packing includes an imager and a USB cable.
- ☞ Accessories include a RS232 cable, a 5V adaptor.
- ☞ Use a piece of dry and soft cloth when cleaning the imager is in need.

### Parts of the imager

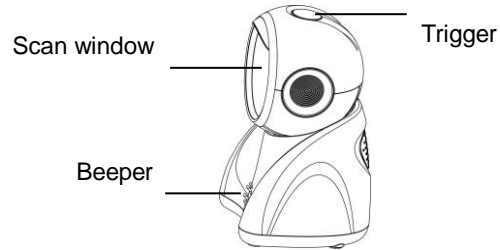


### Installing the cable

1. Switch off the host;
2. Refer to the below pictures, connect the host with the imager based on different cables;
3. Ensure that all connections are secure.
4. Switch on the host system. If the installation is successful, the beeper will beep and LED will light.

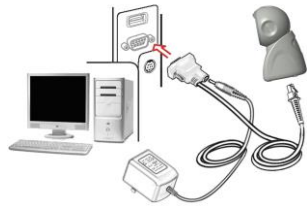

RS232 cable

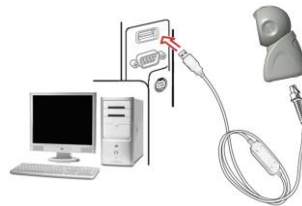

USB cable

### Return default parameters and version information



%%%DEF

Default value initialization



%%%VER

Firmware version list

Note: If the host cannot receive data normally because the input speed of the imager is too fast, please scan the barcode below:



%0903D01%

### Programming instruction and example

Two programming modes have been provided as bellows:

- Single-scan setting

Scan the appropriate

Single-scan setting



%0301D03%

Example: to set Flow control to be XON/XOFF.

- Multiple-scan setting

Scan "Option bar code"



Scan "The 1st character of option"



Scan "The 2nd character of option"



Scan "END"



%0301M%

0

3

%END%

Example: to set Flow control to be XON/XOFF.

## Reading techniques

1. Press and hold the trigger, the imager projects a green LED square which allows positioning the barcode within its field of view, and turns on a white LED for illumination.
2. When reading a barcode, the green LED square will be smaller when the imager is closer to the barcode and larger when it is farther from the barcode. Please hold the imager at an appropriate distance from the barcode, and center the green LED square on the barcode.
3. On a successful barcode reading, the imager will beep once, and the green LED square and white LED will be turned off. Then the imager transmits barcode message to the host.



## Enable illumination in low light conditions

Notes: This function is only valid in auto-induction mode.



## Scanning mode

Note: The factory default settings are indicated with asterisks (\*).



## Volume of beeper

